


MENU HIERARCHY

Push JogDial to enter Menu

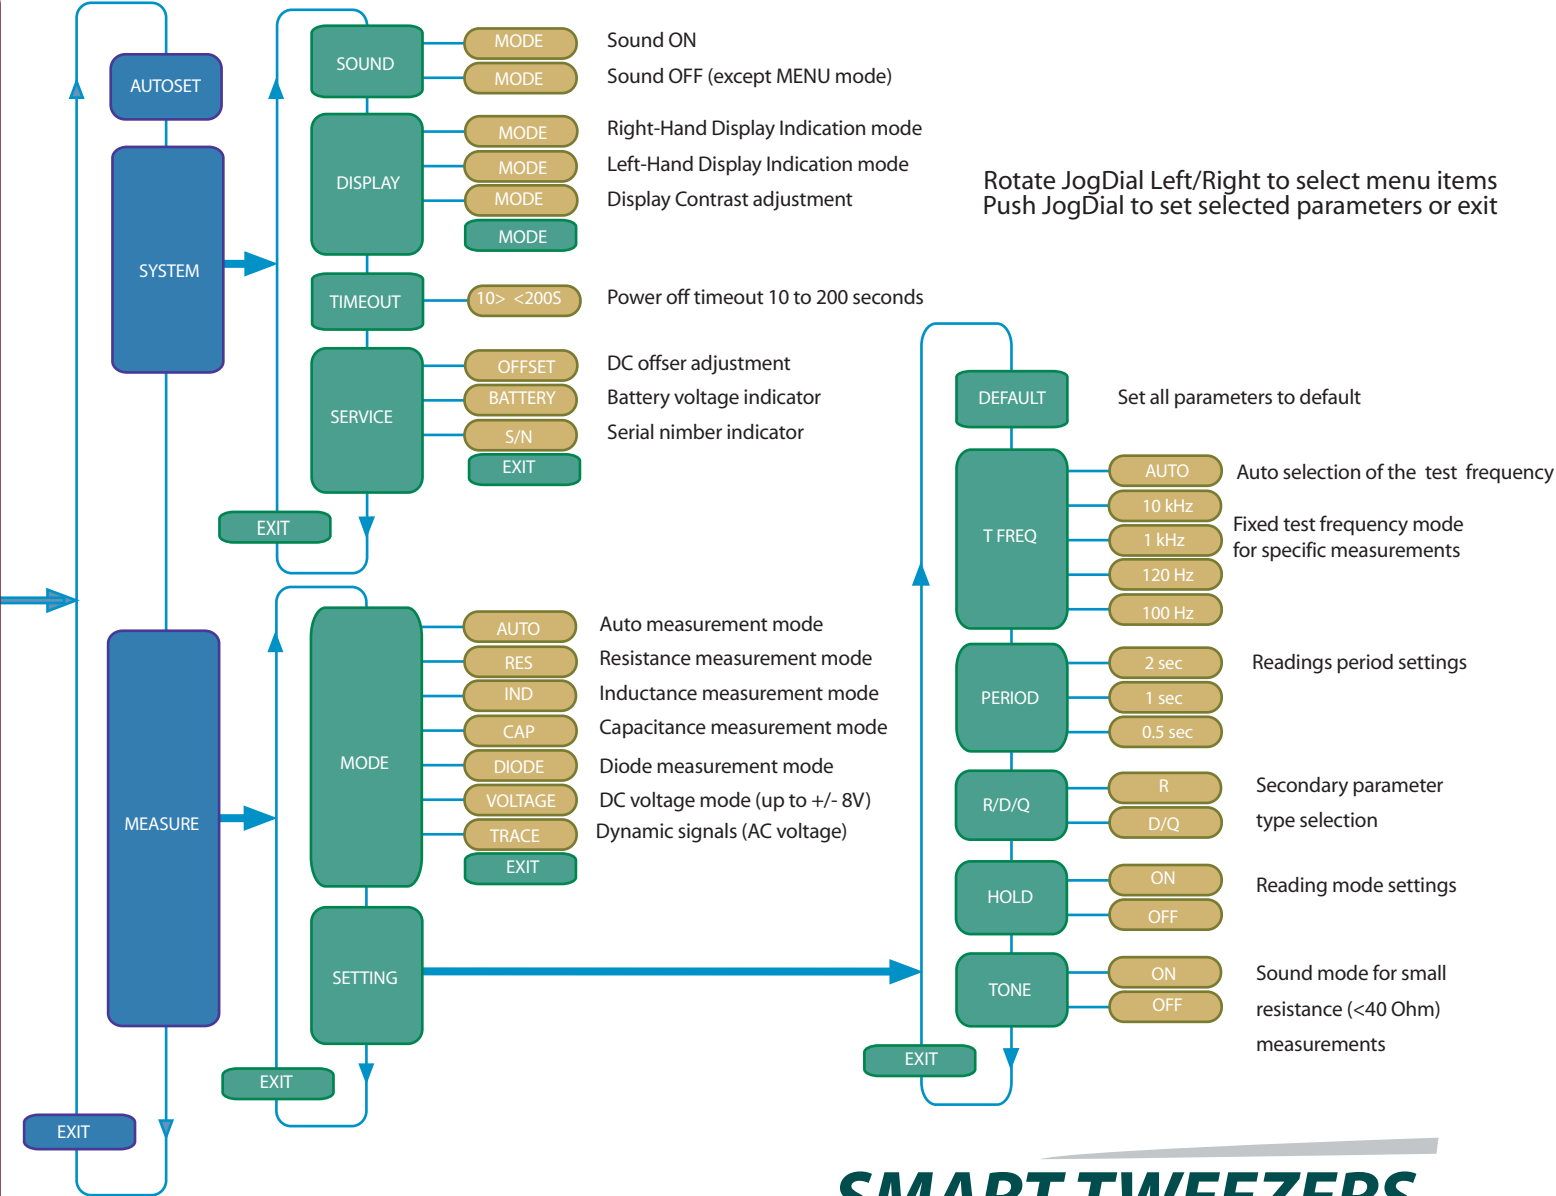

Rotate JogDial Left/Right to select menu items
Push JogDial to set selected parameters or exit

SMART TWEEZERS